


Flash Fabric Pop up



Frame setup

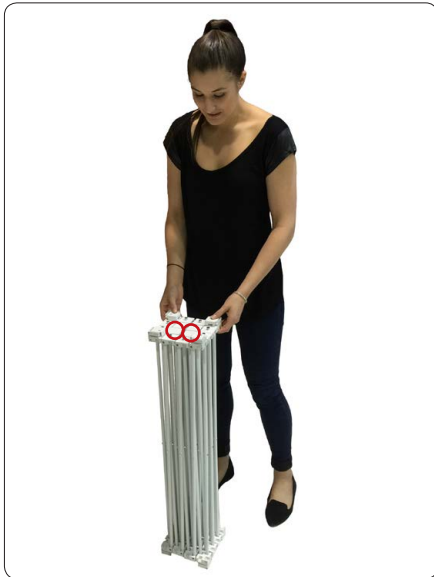

1. To erect frame, hold the 2 middle hubs 2nd from the top. Lift up the frame in front of you while pulling the 2 hubs apart.



2. As the frame extends, the magnetic joining bars will come together and hold the frame in place.



3. Open the bag with folded graphic bars and slot the 3 pieces into one bar.



4. First slot the bottom of the bar into the bottom hub at a slight angle as shown. Carefully slot the top of the bar into the hub making sure the 2 middle hubs are connected to the bar.



Middle connector




Top & bottom connector

5. Repeat this process for the 2 vertical and 2 horizontal edges of the front. You may need to lay the frame on its back to attach the top and bottom bars.


Single sided unit

- Front vertical & horizontal bars
- Back vertical bars

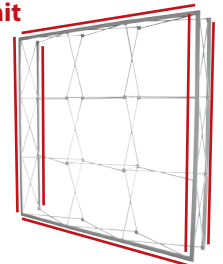

Double sided unit

- Front vertical & horizontal bars
- Back vertical & horizontal bars

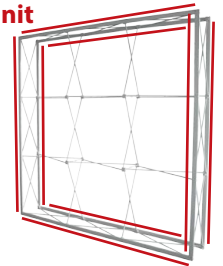

6. The number of graphic bars will differ depending if your system is a single sided or double sided unit. Single sided units have 6 graphic bars and double sided units have 8. Refer to the diagrams above when setting up your display.

FREE CALL
1800 606 682
www.flash.com.au

Sydney
15 Chapel Street
Marrickville NSW 2204
T +61 2 8594 3555
E flash.aus@flash.com.au


Brisbane
19 Chester Street
Newstead Qld 4006
T +61 7 3620 7600
E brisbane.qld@flash.com.au

Canberra
61 Kembla Street
Fyshwick ACT 2609
T +61 2 6280 6166
E canberra.act@flash.com.au

Flash Fabric Pop up




Graphic setup single sided

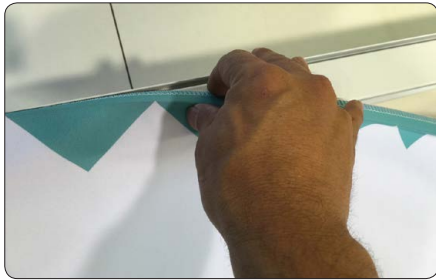

1. Lay the frame on its back. Place the graphic on top and ensure it is centred on the frame (ends should be hanging over). Insert edging across the top and bottom only.

2. Stand up the display then wrap the end cap to the REAR edge and insert the edging into the REAR slot.

Graphic setup double sided

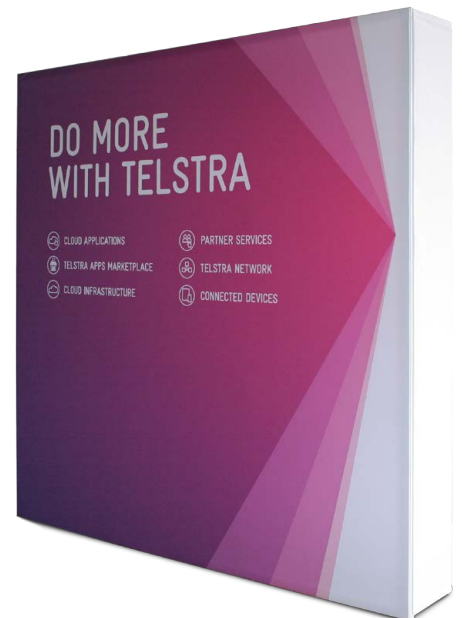

1. Lay the frame on its back. Start by inserting all 4 corners of the front graphic. Fix mid sections in place then work your way back to the corners.

2. Apply the sides panels by inserting the front edge into the track, then inserting the back edge. Place the stand face down and apply back graphic as in step 1.

FREE CALL
1800 606 682
www.flash.com.au

Sydney
15 Chapel Street
Marrickville NSW 2204
T +61 2 8594 3555
E flash.aus@flash.com.au

Brisbane
19 Chester Street
Newstead Qld 4006
T +61 7 3620 7600
E brisbane.qld@flash.com.au

Canberra
61 Kembla Street
Fyshwick ACT 2609
T +61 2 6280 6166
E canberra.act@flash.com.au